

Wireless Products General

If the receiver loses signal from the transmitter does the DMX channels on the receiver stay at what they last received or do they go to zero or full?

When any CTI wireless receiver of any vintage loses signal, the DMX output stops. For fixtures to hold their last look, the fixture would need to have that ability and have it turned on.

Unique solution ID: #1015

Author: Jannelle Boisseau

Last update: 2022-11-02 19:21