

# ColorSource Relay

## How do I turn on the relay in my ColorSource Relay?

- Auto Mode: Relay turns on when DMX/ RDM input is detected. Relay turns off five minutes after data is last detected. (Default Mode)
- DMX Mode: Relay turns on when DMX address 512 (default address) is at or above 50%(default level) and turns off when below 50%. The relay can also be patched via RDM to an address between 1 and 511. Changing the address from 512 disables the turn on delay function of the relays.
- RDM Mode: Relay turns on when it receives an RDM command to turn on. The relay remains on until it receives an RDM command to turn off, or until power is cycled to the unit.

Unique solution ID: #1148

Author: Jannelle VanEtten

Last update: 2023-08-07 15:43