

# Multiverse Transmitter

**I have my Multiverse Transmitter 5910/5911/5912 plugged directly in via the ethernet port to my ETC console. When I power on the console I lose control of my Multiverse Transmitter and I have to power cycle the Transmitter. What can I do to prevent this from happening?**

Try adding a switch between the console and the Multiverse Transmitter. This should eliminate the issue and allow you to power on the console without disturbing the Multiverse Transmitter.

Unique solution ID: #1154

Author: Jannelle VanEtten

Last update: 2023-08-14 15:00