

Multiverse Transmitter

How do I set a static IP address in my Multiverse Transmitter?

Via the DMXCat app connect to your Multiverse Transmitter. Once you are connected please follow the following steps:

1. Select the purple Multiverse Transmitter button on the home page of the DMXCat app
2. Select the RDM arrow on the top right
3. Scroll through device details and select IP SETTINGS
4. Disable DHCP & Zeroconf
5. Set your Static IP address and Static Netmask
6. Apply Configuration and confirm by refreshing the page.

Unique solution ID: #1026

Author: Jannelle Boisseau

Last update: 2023-02-20 20:47